

82-HE505

# Cotton Candy Maker

## Instruction Manual



# INDOOR HOUSEHOLD USE ONLY

**Please save and read this instruction manual carefully before use.**

## INTRODUCTION

Thank you for purchasing our cotton candy maker. Each unit has been manufactured to ensure safety, reliability, and ease to use. Before use, please read these instructions carefully and keep the manual for further reference.

## IMPORTANT SAFEGUARDS

When using your cotton candy maker, basic precautions should always be paid attention to, including the followings:

1. Read all instructions before operating this appliance.
2. DO NOT TOUCH the hot surface. Use handles or knobs.
3. To protect from electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
4. Close supervision is necessary when this appliance is used by or near children.
5. Unplug the appliance from outlet when not in use and before removing parts for cleaning.
6. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair or send it back to the company as stated in this booklet in the warranty.
7. The appliance manufacturer does not recommend the use of accessory attachments. This may cause injuries.
8. DO NOT use outdoors.

9. DO NOT let the cord hang over the edge of table or counter.
10. DO NOT place on or near a hot gas or electric burner or in a heated oven.
11. Extreme caution must be employed when moving this appliance.
12. DO NOT use the appliance for usage that it does not intend to.
13. DO NOT leave any unit unattended while in use or when plugged in to an outlet.
14. Check inside the heating element compartment for foreign objects before switching to ON position.
15. The heating element in the center can get hot. Avoid contact until cool.
16. A short power supply cord is provided to reduce the risk of entangling or tripping-over by a long cord.
17. Longer detachable power supply cords can be used if care is exercised in their use.
18. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug intends to fit into a polarized only one way.
20. Keep hands away from the machine when it is in the ON position and is spinning.

## SAVE THESE INSTRUCTIONS!

## APPLIANCE SPECIFICATIONS

**120V  
60HZ  
450W**

## IMPORTANT PRECAUTIONS TO REMEMBER

- A. NEVER immerse in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth.
- D. NEVER use a scouring pad on the unit.
- E. NEVER leave any unit unattended while in use.
- F. NEVER place anything other than the intended sugar in the extractor assembly head.
- G. Unplug the unit from outlet when not in use and when cleaning.
- H. DO NOT operate this appliance with a damaged cord or plug or if the appliance ever malfunctions.
- I. DO NOT put in dishwasher.
- J. Keep out of reach of children.

## BEFORE USE

Your Cotton Candy Maker is already fully assembled. Follow the cleaning instructions to wash the appliance in warm water, and to rinse and dry thoroughly.

After cleaning and thoroughly drying the bowl, return to base making sure it is **LOCKED** into position. Align the metal tabs on the base unit with the plastic tabs on the bowl counterclockwise to **LOCK** make sure it is secured and locked into position. To remove, turn clockwise to **UNLOCK**.

Return the extractor head assembly making sure that the grooves are properly aligned to fit over the pegs on the stem, see below.



## TO OPERATE THE COTTON CANDY MAKER

First, find a stable surface near an electrical outlet before starting. (Make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord)

1. Plug in the unit at the OFF position
2. Turn the unit to ON position and allow it to run for at least 5 minutes. This will allow it to warm up. Then switch to OFF.
3. Measure a level tablespoon of sugar with the measuring spoon supplied with your Cotton Candy Maker. Pour sugar into center receptacle of extractor head assembly, see below



4. Your Cotton Candy Maker will spin the sugar into a flossy sweet treat that you collect on the wooden sticks provided in the box

5. When you can visually see the cotton candy web, begin to collect the cotton candy on the stick by holding your stick vertically. Rotate the stick with your fingers while you circle the bowl. Once cotton candy has collected on the stick, hold the stick in a horizontal position over the extractor head while still rotating the stick with your fingers. Continue turning the stick with your fingers in the horizontal position and moving from side to side to make sure you are collecting all the cotton candy, see below.



6. Turn the unit OFF when all the sugar has been dispensed. Once the extractor head has come to a complete stop, you can pour another measure of sugar in the extractor head and begin again. The cotton candy should be flowing more quickly as the unit has been sufficiently warmed up.

## **CLEANING THE COTTON CANDY MAKER**

1. Make sure the unit is unplugged and has had time to cool down before cleaning

2. After cooling, remove the extractor head assembly by pulling it straight up. UNLOCK bowl by turning clockwise and remove. Wash both in warm water, rinse and dry

3. Use a slightly damp, non-abrasive sponger or towel to wipe clean the outside of the unit; wipe with a non-abrasive towel to dry

The Cotton Candy Maker breaks down to cart body, bowl, and extractor head assembly for easy cleaning, see below.



NOTE: Cotton candy is made by heated sugar. This turns sugar into a liquid form, then the sugar liquid is forced out of tiny holes in the extractor head by centrifugal force as the extractor head spins. As the liquid sugar hits the air, it returns into a solid fluffy material that adheres to the wooden stick.

**IT IS VERY IMPORTANT THAT THE UNIT BE CLEANED PROPERLY AFTER EVERY USE. IF NOT, THE HOLES WILL GET CLOGGED AND SUGAR WILL NOT BE ABLE TO SIFT THROUGH THE TINY HOLES PROPERLY.**

## **NOTES**

For optimum results- Be sure to turn unit ON and allow it to run for at least 5 minutes before starting. This allows the unit to properly warm up before beginning to actually spin the cotton candy. Only add sugar to the extractor head when it has come to complete stop. Never use ingredients other than pure granulated sugar. This will cause clogging. DO NOT overfill the sugar receptacle.

## **HERE'S A TIP**

You can use regular household granulated sugar in your Cotton Candy Maker. To add a little flavor and color, mix a pinch of your favorite pre-sweetened Kool-Aid to the sugar. Imagine the variety of flavors you can make and the fun you'll have!